



Before using your tumble dryer, please read this manual carefully and keep it for future reference.

Tumble Dryer

USER'S MANUAL

MD600W

Read This Manual

Inside you will find many helpful hints on how to use and maintain your tumble dryer properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your tumble dryer. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.

Catalogue

Features	2
Part Name	3
Installation before use	3
Simple Installation	6
Operation Explanation	7
Predry Actions	7
Inspection on Filter	7
Put in clothes	7
Operation of the control panel	8
The manual of drying clothes	9
How to clean filter, cabinet and inner tub	10
Other Functions Description	11
Warning Function	11
Auto power off	11
Notice	12
Specifications	13
Safety Information	13

 
Features

Features

- 1.Unique and luxury design: Design is according to front loading washing machine with unique appearance.
- 2.Front or back air discharge: front air discharge can discharge the moistures in the clothes directly from the bottom of the front panel to the ambient space, which can solve the troubles of penetrating the wall for air outlet when the back side of drying machine is against the wall, convenient and free of worry; the back air discharge is to discharge the moistures of the clothes directly from the back side of the product to the outdoors without influence on the interior environment. Front or back air discharge can be selected in accordance with the local conditions.
- 3.MicroControl: Simple and convenient operation with the help of PCB board, and it will feel the temperature when drying automatic.
- 4.Big size door window: See the procedure of drying clearly through this window.
- 5.Open the door with 180°:It is very convenient to put in and out clothes with 180° angle opening range.
- 6.Compact instruction: Suitable capacity and unique outlook with anti-dust,anti-humidity, anti shake, long life and low noise design.

Part name·Installation before use

Part name

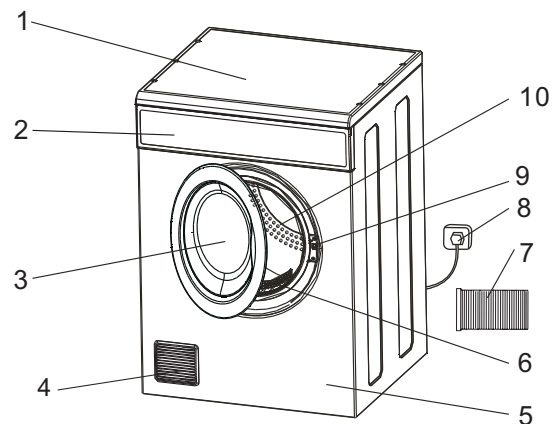


- 1.Top board 2.Control panel 3.Door 4.Front vent cover(Not Applicable to Back vent Type) 5. Cabinet 6.Filter 7. Flex Tube (Not Applicable to Front vent Type) 8.Power lead 9.Switch 10.Tumbling box

Notice before use

The first step:Power source and grounding.

 The dryer employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 6% of rated voltage, the dryer can work normally. A special power socket for the dryer had better be set beside the dryer for convenience and safety. The method of connection of the socket is as the figure below.

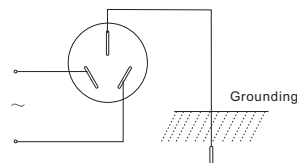

Notices:


The socket and the grounding wire must be installed by an electrician to prevent incorrect installation or use of the socket and to guarantee the safety of use of electricity. The power wire of the dryer employs Y connection ,if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

No connection of the grounding wire with the neutral wire,otherwise the cabinet will be charged, which is likely to cause the danger of electric shock.


Installation before use

Step2:Precautions


Do not store or install the dryer where it will be exposed to water or the weather. If yes, please make them dry before use.

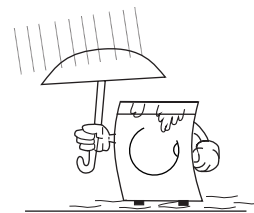


Please put dryer to a ventilated place for better wind circulating and to avoid hidden damage.

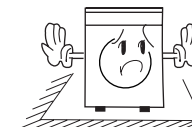


Dank clothes have to be dehydrated well and then be able to put inside for drying which could avoid problems cost by drip.

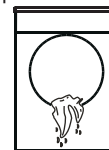

Make sure combustable sprayer will not be close to dryer when it is working, and once the gas leaks, do not touch plug or start / pause on it.

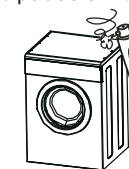


It is not allowed to dry clothes contains combustable cleanser , gasoline etc.

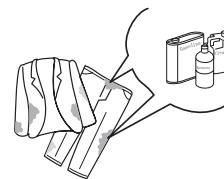


Don't operate this dryer if it is damaged, malfunctioning,partially disassembled or has missing or broken parts.



When the dryer is working, the back side will become hotter. In order to avoid such risk, The dryer is not intended for use by young children or infirm persons without supervision.

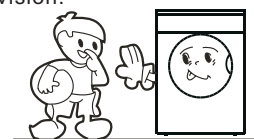

Please do not use the machine when your foot or hand with water..

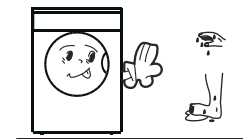

Installation before use · Simple installation


Do not put any heavy or hot article on the top of dryer to avoid deformation of control panel.




Do not try to dry raincoat or fluff clothes or whatever things contains rubber or elasticity materials on any heat setting.



It is not allowed to connect flex tube with flue directly, this is to avoid dust and smoke coming through.

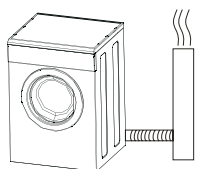

Only open door once program is finished to avoid scalding.

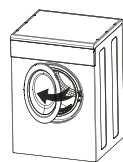

This product belongs to type I electronic products and please take note of safety problem accordingly:

1. It is rule to use power which is buried in the earth and will not touch any socialequipments such as gas pipe or water pipe etc. Make sure the difference of different lines and they are not connected.

2. Please use special socket which is according to National Standard and will endure 10A current.

To be safe, please make improvements as soon as possible according to the rules and suggestions mentioned above.

If your clothes contain following mark or could not be dried in dryer, please stop using your dryer.



Not used for dryer in the tub



Hang for dry



Drip dry



Flat dry




Dry automatically

Simple installation · Operation explanation


Simple Installation

Step 1: Dryer should be placed in a ventilated area with not less than 10 cm distance from the wall. If placed in a room such as bathe room, it is suggested there are no obstacles within 1.5m in front of dryer and keep ventilated.

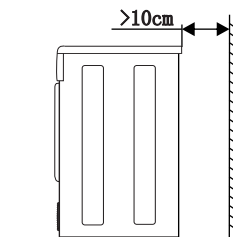

Step 2: The horizontal adjustment:

Tie a heavy subject on the string on the front and two sides of the dryer. Please refer this to below figure, and if A=A', B=B', this means the dryer is placed horizontally. While the opposite, you could place something On the grounding.

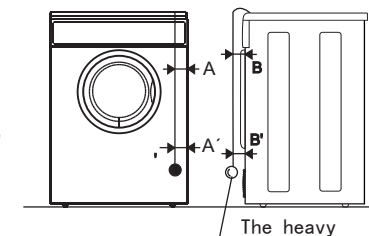

Notice:



If dryer could not be placed horizontally (the lean angle is no more than 2), the dryer will work unbalanced or stop working sometimes.

Notice when installing:

- Do not install the dryer in the open air or place easily damaged by rain;
- Do not place the back of dryer near curtain or something in the wind;
- Do not place the dryer near gas or flammable area.

Step 3: Regarding the fixing of flex tube:

- Connect one side of flex tube with whorl to the back vent, then fix it deasilly till tight.
- The other end of flex tube will be extended to outdoor, pls Refer the right assemble way to the below pictures.

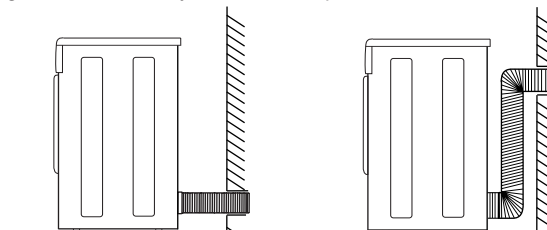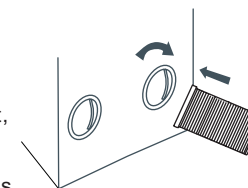

Simple installation · Operation explanation

Operation explanation

1.Preparing before drying

- Clothes have to be washed and spun before putting in the dryer.
- Put same kind clothes to dry together.
- Sort your clothes into loads that take a similar time to dry e.g. Heavier items form light items, it is suggested change the inner side of clothes to outside and then put into dryer.
- Make sure the decoration and buttons are safe for high temperature and will not damage the inner tub of dryer. Make sure the clothes are well protected.
- It is better to turn out the pocket for drying.
- Please check the clothes after washing, and if still dirty on clothes, those dirty may not disappear after drying.
- Please make sure the power socket are well connected and will not touch conduit of water supply and gas supply etc.












2.Make sure the filter is well cleaned and in the right position.

3.Put clothes into the dryer.

- It is better to put clothes with 1/3-1/2 capacity of inner tub for drying because drying needs space to make clothes tumble evenly and overfilling clothes will not get a good result.
- When drying big clothes, it is better to fulfill with small pieces of clothes together.
- When drying expensive or little clothes, it is better to add two towels so as to reach better drying result.
- Do not overdry the clothes to avoid crimple, roughness or static electricity etc.


Operation explanation

The reference weight of dry clothes

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

4.Close the door

5.Instruction on control panel

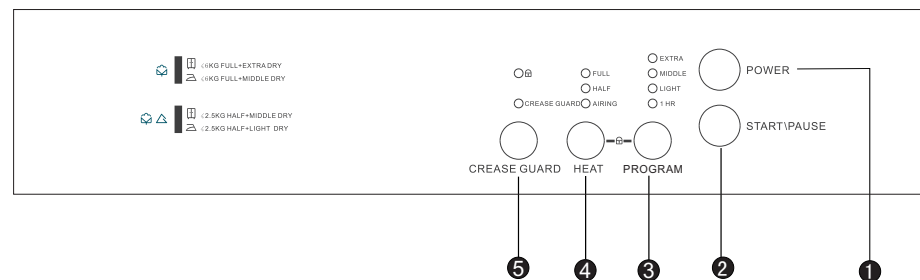

- 1 Power
- 2 Pause/Start
- 3 Program (extra / middle / light / 1 hour)
- 4 Heat (full / half / airing)
- 5 Crease Guard

Note: Push Program and Heat at the same time, function could be changed to Lock.

1) Push Power button;

2) Program setting will according to the texture and capacity of clothes. Every time pushing the Program button, the indication light will shine orderly for a while, and stop at the program you choose;

Operation explanation

3)Temperature setting will according to the texture and capacity ofclothes. Every time pushing the Heat button, the indication light will shine orderly for a while, and stop at the program you choose;

4)For function of Crease Guard, it is better to dry some expensive or easily creased clothes. When the indication light is on, it works.

5)Push Start / Pause button, it works while push it second time, it stops working for 3 seconds, and could be adjusted to restart program, and also add or reduce clothes through the door but to avoid hot steam scalding. Push again, and it continues working. This button is used for switch between start and pause. If push Start / Pause button directly, dryer will work with middle dry and full heat automatically.

6)Lock function could be started when push Program and Heat button at the same time with indication light on, and this can avoid children's mistake. If push the two buttons again, dryer will be unlocked.

Note: Push all buttons will cause a short buzzer with shining lights.

Drying Clothes instruction

Program	Max volume of dry clothings	Temperature	Clothings type	Air-cold	Anti-rease	Child-lock	About dry time
An hour dry	3. 0kg	Full heating√	Easy to dry and not need lots of time to dry on clothings.	10min	√	√	60min
	<3. 0kg	Half heating√					
	2. 0kg	Air-dry√	Fine fabric and not need to heat on clothings.				
Light dry	4. 0~6. 0kg	Full heating√	Chemical fiber and small size clothings.	10min	√	√	100min
	<4. 0kg	Half heating√					
Middle dry	4. 0~6. 0kg	Full heating√	Cotton weaving and jeans	10min	√	√	140min
	<4. 0kg	Half heating√					
Extra dry	4. 0~6. 0kg	Full heating√	Bedsheet、cotton clothings and jeans.	10min	√	√	170min
	<4. 0kg	Half heating√					

Note: 1. Cold wind function means there is only cold wind for circulating before finishingheating 10 minutes';

2. Crease Guard means after programming, it adds extra 30s' one way running to shake clothes in order to protection of creasing;

3. The inside temperature and humidity will not affect drying time;

4. Check the label attached on clothes and choose the right temperature and time according to the explanation.

Suggestion: When clothes is less than 0.5kg, please select an hour dry and full heating for drying.

Operation explanation

6. End of Program

At the end of program, buzzer rings to remind take out clothes from dryer.

7. Take out the plug

To be safe, please take out the plug after using every time.

8. Clear filter, cabinet and inner tub.

- Accumulated woolen chips etc will affect air circulate smoothly and cost long time for drying, it is better to clear it once finishing working.
- Make sure to cut off the power before clearing.

Filter Clean

1) Unbolt filter

 
The lint filter is located in the door opening, remove the lint filter and open it out.

2) Cleaning filter

Use wiping cloth wipe with your hand.

3) Install filter

If the filter is cleaned by damp cloth or in the water, please install after the sun dry.

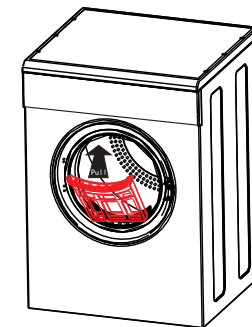

Cleaning cabinet and inner tube

 
Use soft damp cloth wipe when cleaning cabinet and inner tube.

1. Not to rinse by water direct.

2. Not to use neutral scour wipe.

3. Not to use gasoline and alcohol wipe.

Make sure open the front door for aeration after cleaning the inner tube.

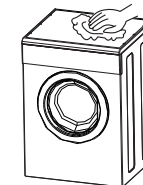

Other functions description

Other functions description

Step 1: Warning function

Indication of fault	Cause of fault	Phenomenon of fault	Alarm of the buzzing sound	Solution of alarm
Alarm for temperature exceed	If the check temperature exceed 63 in any program, alarm.	"Middle dry" "strong dry" indicator flash	The buzzer goes on buzzing sound for 10 seconds. If the alarm does not be solved, every 16 minutes re-buzzes for 10 seconds.	Power off wait the heating temperature fall then start
Alarm for the door open	Open the door after program start	"little dry" "middle dry" indication flash		Close the door solve alarm, restart the program.
Alarm for malfunction of temperature sensor	Program start sensor open	"An hour dry" "light dry" indication flash		Power off check the machine start it when in normal
	Program start sensor short	"An hour dry" "middle dry" indication flash		

Step 2: Auto power-off function

1. This machine will auto power-off after 10 minutes when you do not start any program.
2. This machine will auto power-off after 6 times buzzer on drying.

Notice

Trouble	Cause	Solution
Will not start	<ul style="list-style-type: none"> ● Power cut. ● The power plug is not plugged tight. ● Dry clothes exceed. ● The temperature fuse is cut. 	<ul style="list-style-type: none"> ● Wait for switching on electricity. ● Check the power socket, make sure plug tight. ● The clothes in drier must be after spinning, and drying clothes can not exceed 7kg. ● Please career man restore the temperature fuse.
External hot or can smell hot	<ul style="list-style-type: none"> ● The lint filter is dirty. ● The uptake or exhaust duct is dirty. 	<ul style="list-style-type: none"> ● Make sure clean the lint filter in time. ● Clean out the stem.
Clothes too dry	<ul style="list-style-type: none"> ● The clothes in machine are too full. ● Not to take out the clothes in time when finish. ● The clothes don't assort properly. ● The temperature is enacted too high. 	<ul style="list-style-type: none"> ● Make sure the clothes are not too full. ● Take out the clothes immediately when finish. ● See page 7. ● Observe the maintenance label on clothes.
Clothes shrink	<ul style="list-style-type: none"> ● Too dry. 	<ul style="list-style-type: none"> ● Observe the maintenance label on clothes, if easy to shrink, should examine the clothes when dry. Take out the clothes when tiny damp for too dry. Then hang the clothes until full dry.
Hairball on clothes	<ul style="list-style-type: none"> ● It is right for synthetic fibre and permanent press fibre causing hairballs. This is because the right rub causing. 	<ul style="list-style-type: none"> ● Use fabric softener lubricate fibre, please spray settled gule on cuff and neckline when iron clothes. Turn the sarcenet out for reducing rub.

The sound of dryer when runs can cause

- Buzzer of vibration: Due to heavy wet clothes' turning and bumping, and this will cause noise accordingly.
- Air bumping: When drying, machine will generate steam which will come out from pipe and this will cost bumping with the bottom of inner tub.
- Timer noise when working.

Specifications · Safety Information

Specifications

Dimension	595x550x840(mm)	Weight of product	33kg
Rated input power	1700W	Rated volume of dryer	6.0kg (Dry clothes)
Rated voltage	230V~	Rated frequency	50Hz

Safety Information

1. “This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.”
- 2.“Children should be supervised to ensure that they do not play with the appliance.”
3. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
4. The lint trap has to be cleaned frequently, lint must not to be allowed to accumulate around the tumble dryer(not applicable for appliances intended to be vented to the exterior of the building).
5. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
6. Do not dry unwashed items in the tumble dryer.
7. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Safety Information

8. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
9. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
10. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
11. Remove all objects from pockets such as lighters and matches.
12. **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- 13.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 14.The maximum mass of dry textile material in kilograms to be used in the appliance.
- 15.Do not dryer unwashed items in the tumble dryer.
- 16.Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
17. For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
- 18.That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- 19.That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- 20.If the installation instructions state that the tumble dryer can be placed on top of a washing machine, they shall state which washing machine are suitable. Instructions shall be given for the assembly of the tumble dryer and washing machine .The instructions shall state how to obtain any fixing attachments required, unless they are supplied with the appliance.

Safety Information



Correct Disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.